## **ReLax Uninstallation Procedure**

## I. Uninstallation of the device driver

1. Plug the device (Bio-sensor and Controller) into the computer USB slot, click the "Start" menu button  $\rightarrow$  "Control Panel"  $\rightarrow$  "Device Manager".



2. Double click the "Ports (COM & LPT)".



3. Double click "Communication Device Class ASF example".

A Device Manager	x
File Action View Help	
🖂 🖣 Display adapters	
DVD/CD-ROM drives	
🖂 🖓 Human Interface Devices	
IDE ATA/ATAPI controllers	
🖻 📲 IEEE 1394 Bus host controllers	
Imaging devices	
Keyboards	
Image:	
Mice and other pointing devices	
🖻 🐗 Modems	
🛛 🖓 🖳 Monitors	
🕨 🐏 Network adapters	≡
PCMCIA adapters	
Portable Devices	
Ports (COM & LPT)	
Communication Device Class ASF example (COM4)	
D I Processors	
Sound, video and game controllers	
🔉 📲 System devices	
▷ - ♥ Universal Serial Bus controllers	-

4. When the following screen appears, click "Driver"  $\rightarrow$  "Uninstall"  $\rightarrow$  "OK".

Communication Device Class ASF example (COM4) Properties		
General Port Settings	Driver Details	
Communicat	ior Device Class ASF example (COM4)	
Driver Provid	der: ATMEL, Inc.	
Driver Date:	01/08/13	
Driver Versio	on: 6.0.0.0	
Digital Signe	er: Atmel Norway	
Driver Details	To view details about the driver files.	
Update Driver	To update the driver software for this device.	
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.	
Disable	Disables the selected device.	
Uninstall	To uninstall the driver (Advanced).	
	OK Cancel	

5. Choose "Delete the driver software for this device."  $\rightarrow$  "OK".



6. After deleting, the device will no longer appear in the "Device Manager".

