
TrueSense Uninstallation Procedure

I. Uninstallation of the device driver


 Plug the device (with Bio-sensor, memory and Controller connected) into the computer USB slot, click the "Start" menu button → "Control Panel" → "Device Manager".

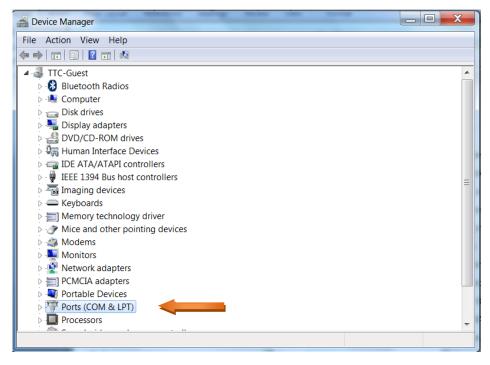


2. Double click the "Ports (COM & LPT)".



3. Double click "Communication Device Class ASF example".

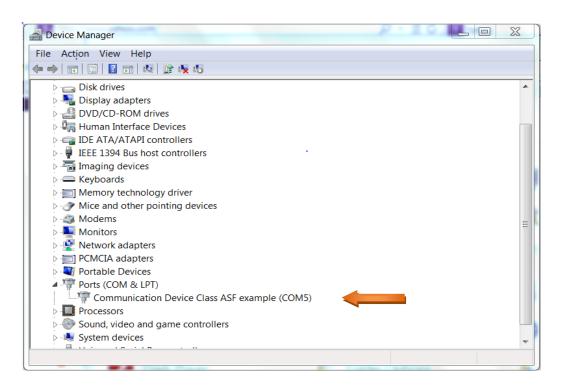

4. When the following screen appears, click "Driver" \rightarrow "Uninstall" \rightarrow "OK".

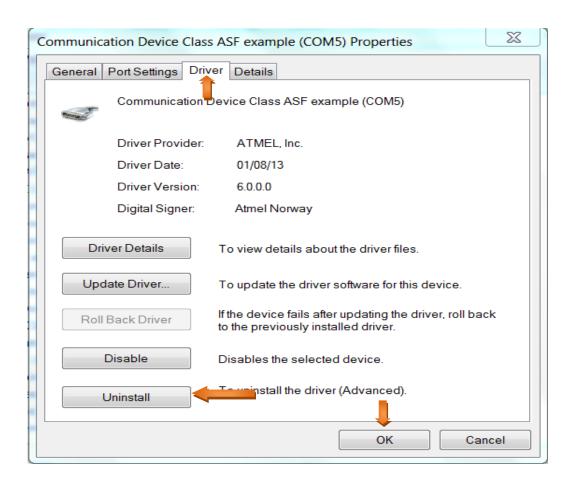

5. Choose "Delete the driver software for this device." \rightarrow "OK".



6. After deleting, the device will no longer appear in the "Device Manager".

